

Mafi shoring system Mafi plate A

Assembly instructions





Step 1: Number of anchors per Mafi plate A



#

Step 2: Possible hole pattern Mafi plate A

Mafi plate A

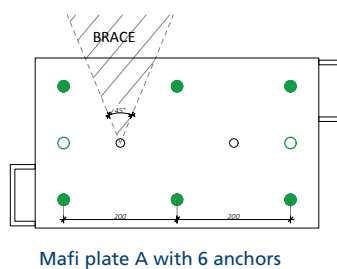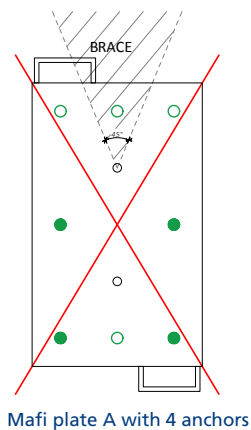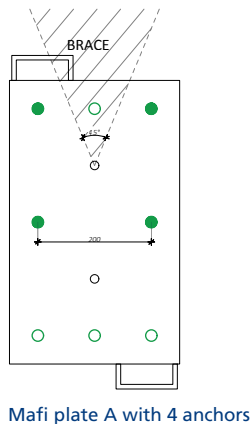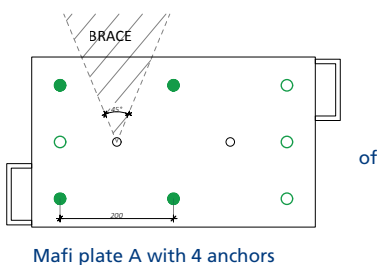

	Brace zone: Reach where the brace can go
	Hole to be used for anchor FH II 18 NL SCD
	Hole without anchor
	Threaded pin
Rule:	c.t.c. anchors ≥ 200 mm

Loosen and tighten the rounded centernut

Mounting 100 Nm
Check 200 Nm



No rights can be derived from this documentation.
Changes reserved.

Edition: nr 5, d.d. 16-07-2025

Assembly instructions

Step 3: Drill the holes in the concrete Ø15 mm or Ø18 mm



Step 4: Place the anchor in the hole, wrench Ø17 mm or Ø19 mm



| min 3 mm



Step 5: Disassembly

