

Mafi shoring system Mafi plate B

Assembly instructions


Step 1: Number of anchors per Mafi plate B




#

Step 2: Possible hole pattern Mafi plate B


Mafi plate B

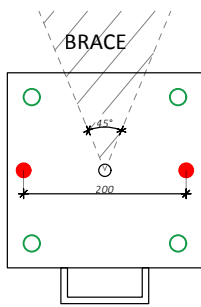


Mafi plate B with 6 anchors

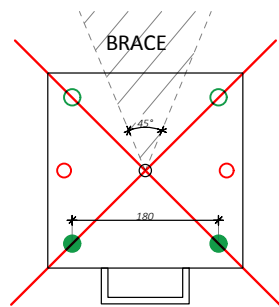


Mafi plate B with 6 anchors

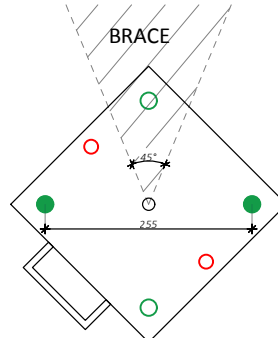

Mafi plate B with 6 anchors

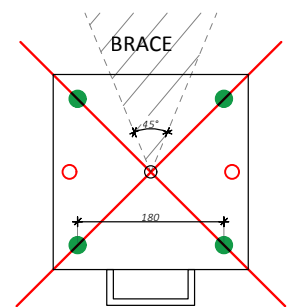

Mafi plate B with 4 anchors

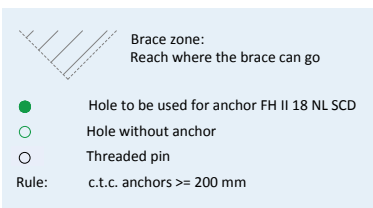

Loosen and tighten the rounded centernut

Mounting 100 Nm
Check 200 Nm




No rights can be derived from this documentation.
Changes reserved.

Edition: nr 5, d.d. 16-07-2025


Mafi shoring system Mafi plate B

Assembly instructions

Step 3: Drill the holes in the concrete Ø15 mm or Ø18 mm

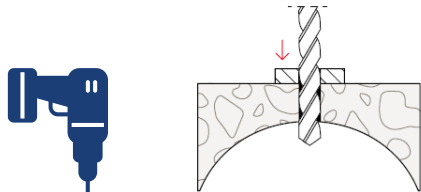

Step 4: Place the anchor in the hole, wrench Ø17 mm or Ø19 mm

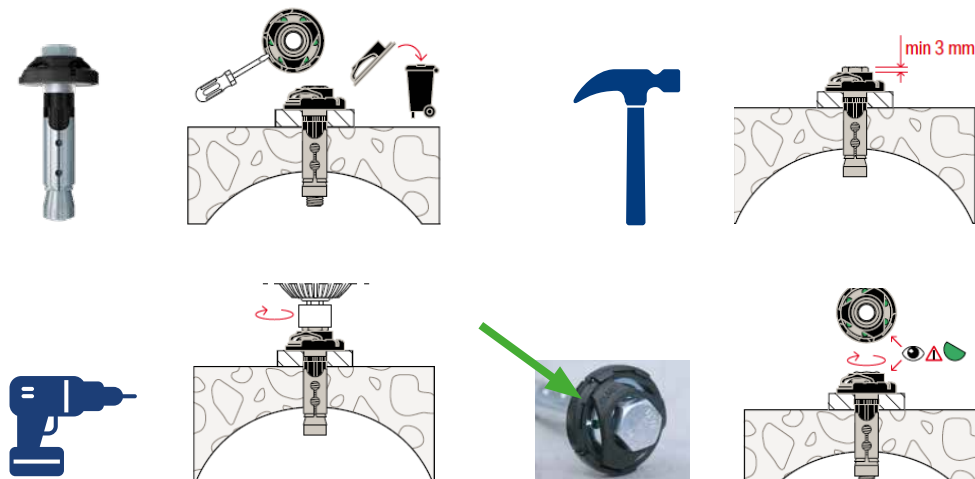

Step 5: Disassembly

