

Mafi shoring system Mafi plate B1





Assembly instructions

Step 1: Number of anchors per Mafi plate B1






Step 2: Possible hole pattern Mafi plate B1

Mafi plate B1

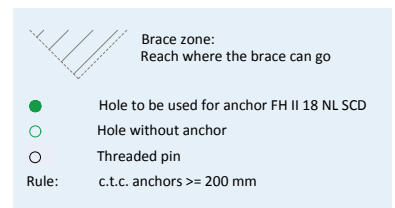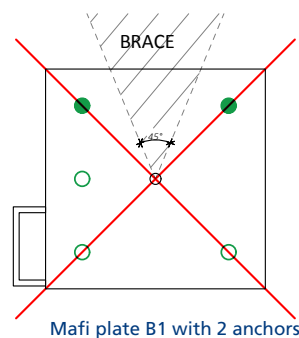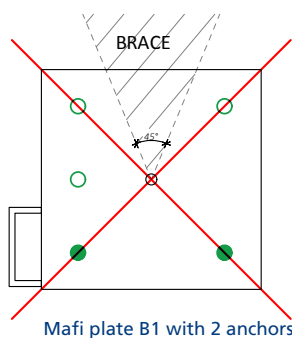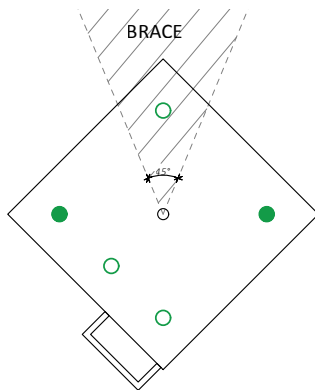

Mafi plate B1 with 2 anchors

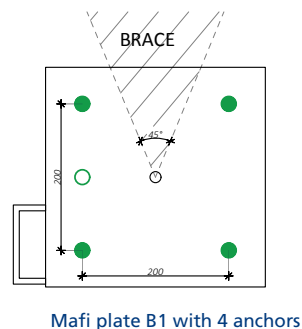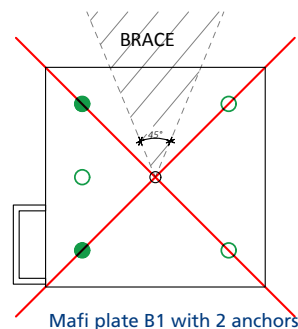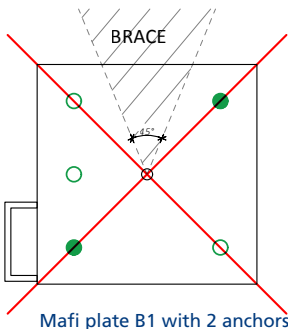

Loosen and tighten the rounded centernut

Mounting 100 Nm
Check 200 Nm




No rights can be derived from this documentation.
Changes reserved.

Edition: nr 5, d.d. 16-07-2025


Mafi shoring system Mafi plate B1

Assembly instructions

Step 3: Drill the holes in the concrete Ø15 mm or Ø18 mm

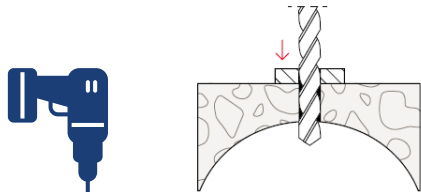

Step 4: Place the anchor in the hole, wrench Ø17 mm or Ø19 mm

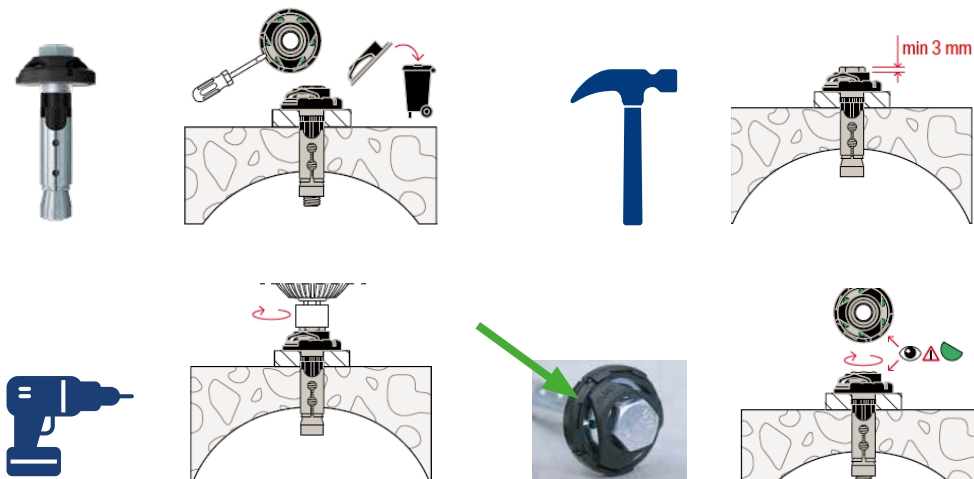

Step 5: Disassembly

